

BL3080 MG Pro ECP Models - Handing & Push/Pull Guide

Hinged on the Right


Opens away from you when opening

Hinged on the Right

Opens towards you when opening




BL3080 MG Pro ECP - PUSH LEFT HAND

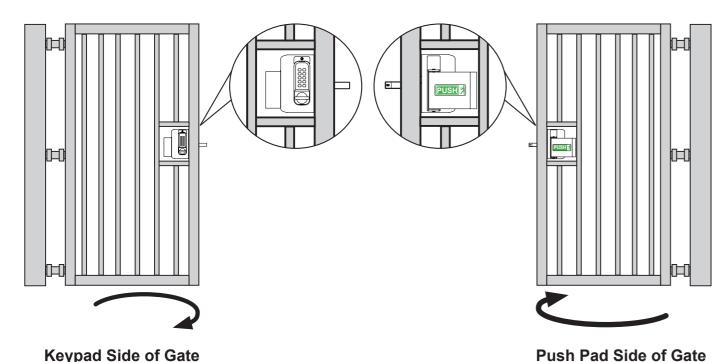


Keypad Side of Gate Hinged on the Left Opens towards you when opening

BL3080 MG Pro ECP - PUSH RIGHT HAND

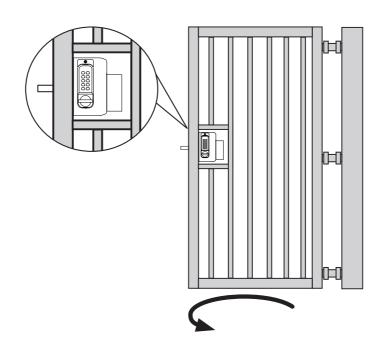


Keypad Side of Gate
Hinged on the Right
Opens towards you when opening

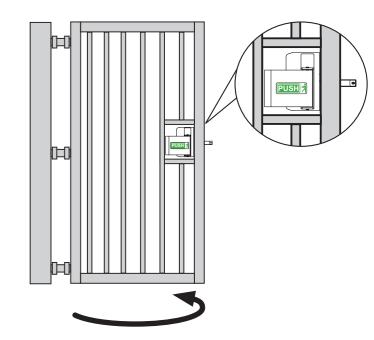

Push Pad Side of Gate
Hinged on the Left
Opens away from you when opening


BL3080 MG Pro ECP - PULL LEFT HAND

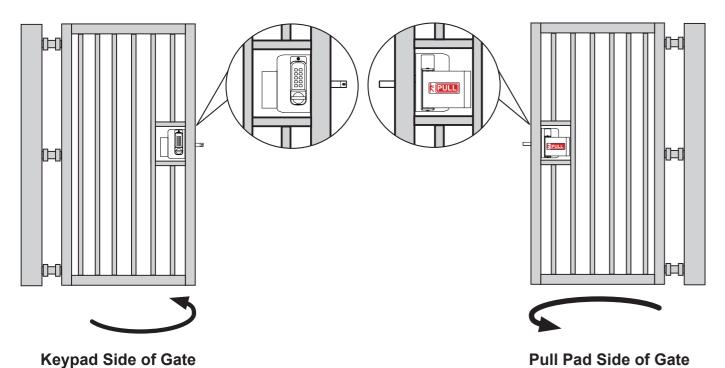

Hinged on the Left


Hinged on the **Left**Opens away from you when opening

BL3080 MG Pro ECP - PULL RIGHT HAND

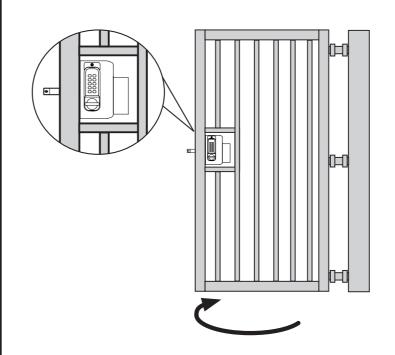

Keypad Side of Gate

Hinged on the **Right**Opens away from you when opening

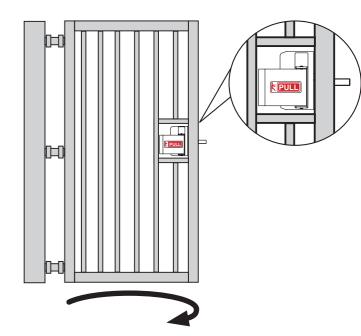

Pull Pad Side of Gate

Hinged on the **Left** Opens towards you when opening